



**>>** 

Working in a shipyard exposes to various respiratory health risks. To prevent and reduce risks, it is necessary to adopt a series of safety measures concerning both the organisation of work and the personal protection of workers. Among these measures, the first is to always wear a protective mask.

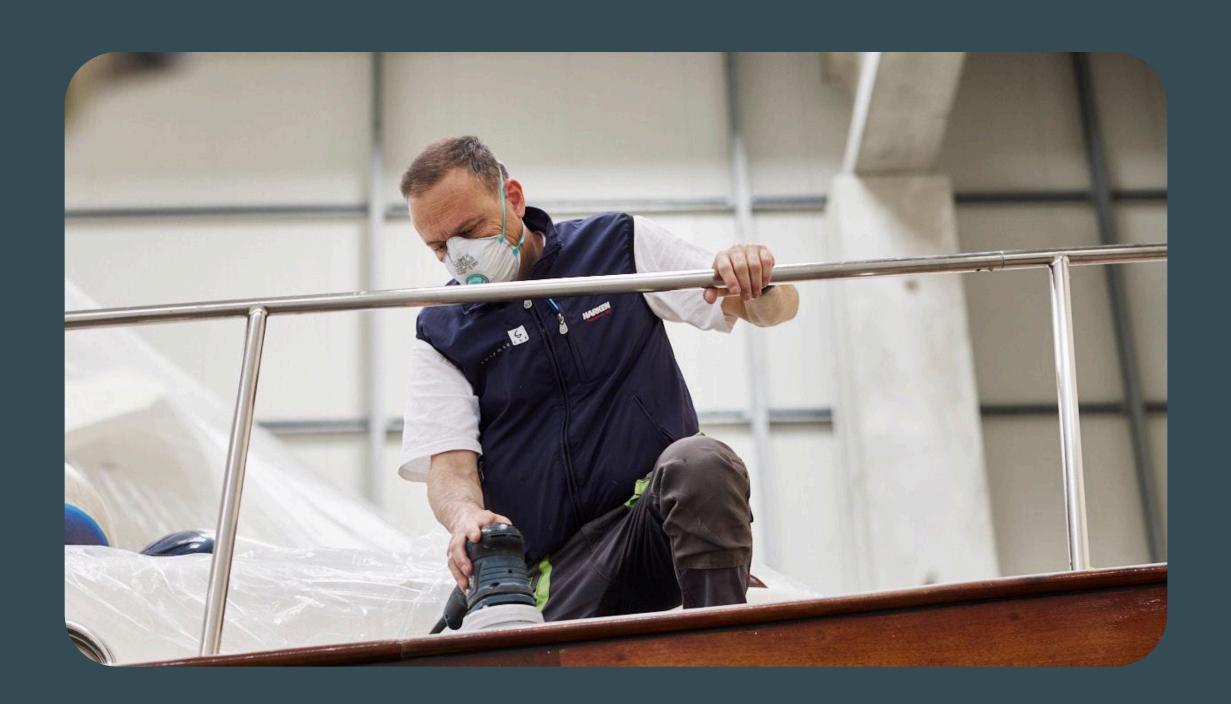

There are several hazardous situations on construction sites that could cause (or contribute to) respiratory diseases. The main ones are: Handling of chemical agents Exposure to dust/fibres/fumes · Poor ventilation, high temperatures, humidity and low oxygen

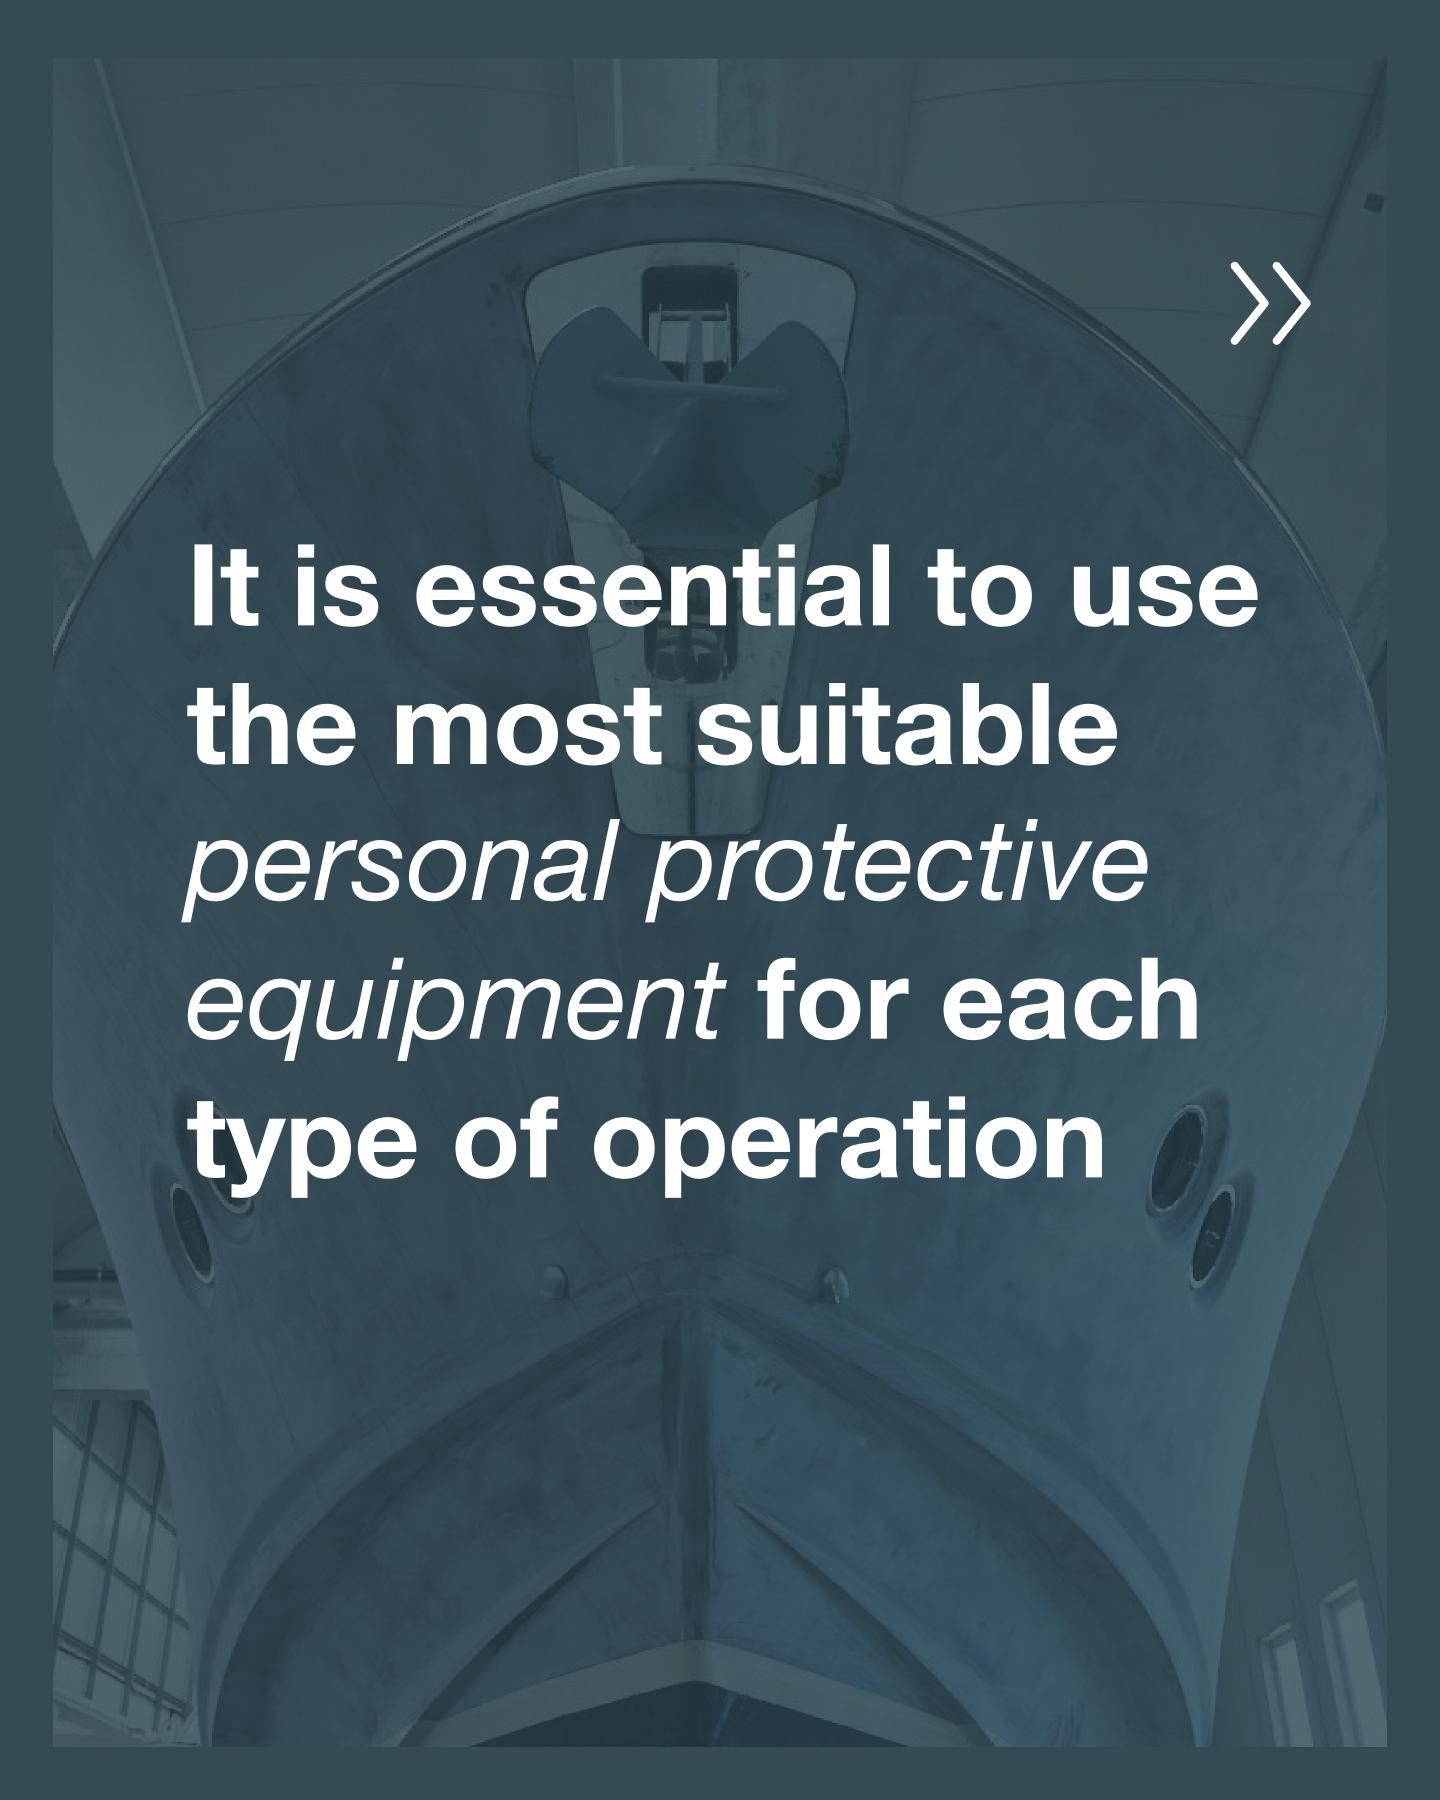



## **PRODUCTION**

During the construction it is necessary to use protection suitable for resin.

We recommend the use of half-masks with A2P3 filters. For prolonged exposure or eye protection, a full-face mask with the same filters is preferable.

For operations such as carpentry, where particles are generated, an FFP3 filtering face piece is a practical and effective solution.

## MAINTENANCE

During maintenance operations such as sanding or welding, the use of FFP3 filtering pieces or half-masks with P3 filters is required.

For painting, a half mask with A2P2 protection can be used. If protection is also required for the eyes, a full face mask with glass visor and A2P3 filters, resistant to solvents and chemicals, is preferable.

